


ETCB Part List

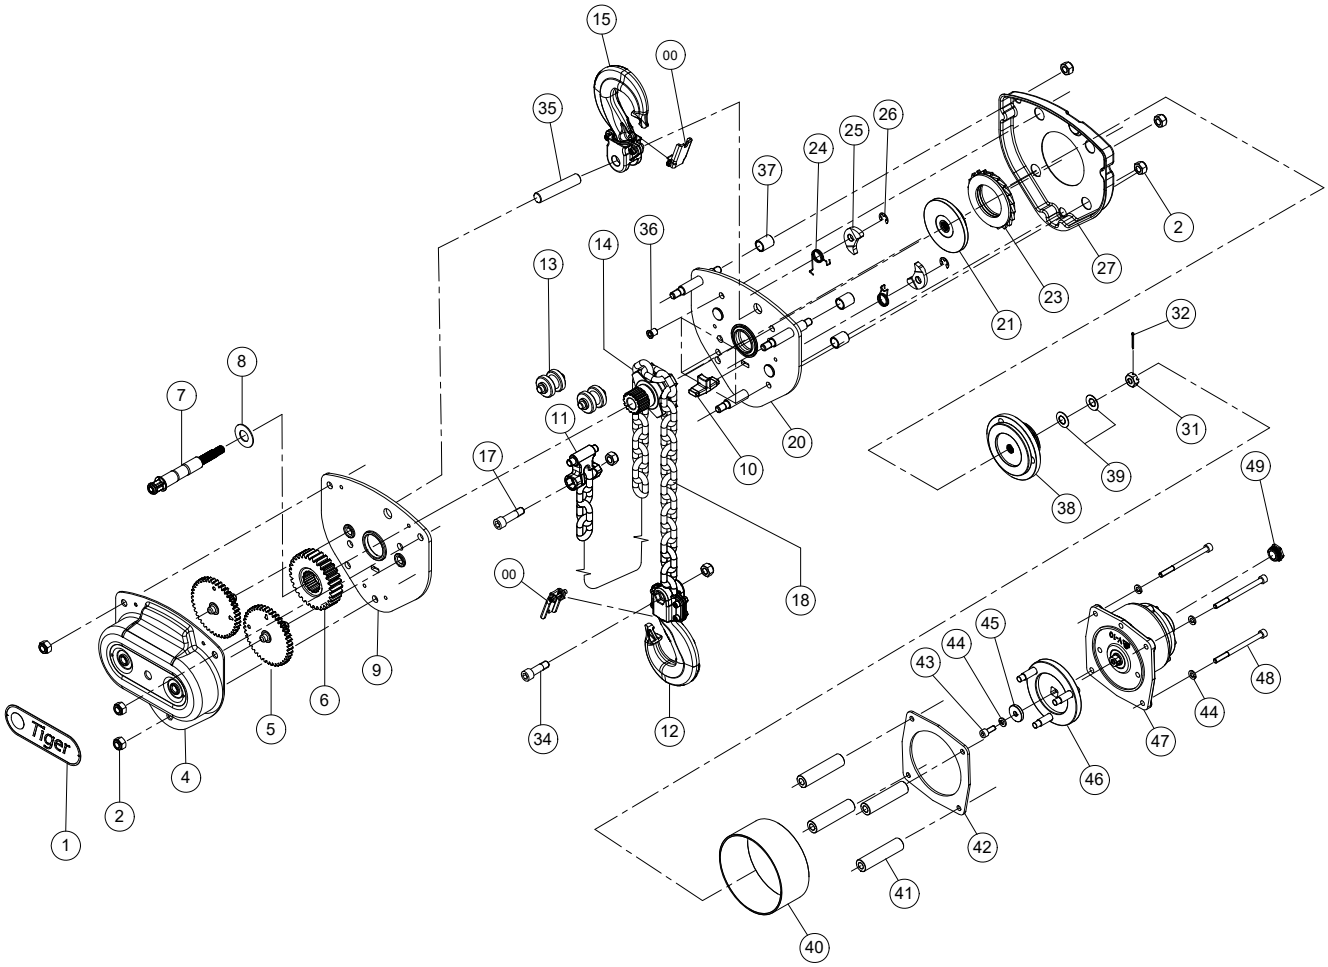



6t Hook Assembly

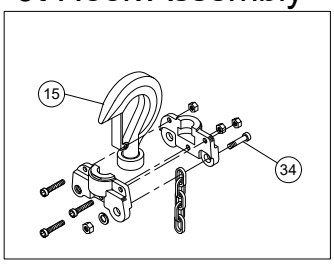

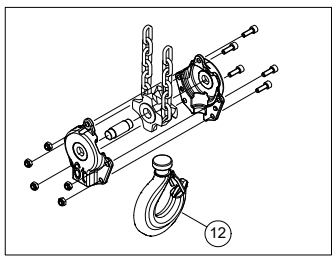

10t Hook Assembly

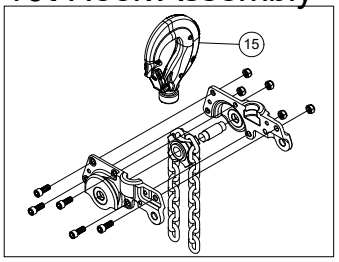

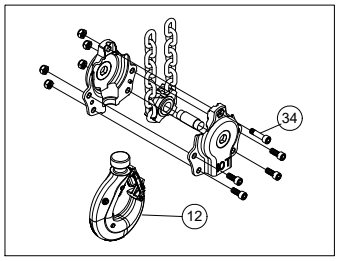

2026-V1-EN

	Part No	Part Name	QTY	Interchangeable with PROCB
①	ET-1	Label	1	
②	ET-2	M12 Nut	8	●
④	ET-4	Gear Cover	1	●
⑤	ET-5	Pinion (with Pinion Gear)	2	●
⑥	ET-6	Load Gear	1	●
⑦	ET-7	Pinion Shaft	1	●
⑧	ET-8	Pinion Shaft Washer	1	●
⑨	ET-9	Gear - Side Plate Assembly	1	●
⑩	ET-10	Chain Stripper	1	●
⑪	ET-11	Load Chain Anchoring	1	●
⑫	ET-12	3t Bottom Hook Assembly	1	●
		6t Bottom Hook Assembly	1	●
		10t Bottom Hook Assembly	1	●
⑩⑩	ET-00	Safety Latch Assembly	2	●
⑬	ET-13	Load Chain Guide	2	●
⑭	ET-14	Load Sheave (ETCB-Type)	1	
⑮		3t Top Hook Assembly	1	●
	ET-15	6t Top Hook Assembly	1	●
		10t Top Hook Assembly	1	●
⑰	ET-17	Chain-End-Fixing Pin	1	●
⑱	ET-18	Load Chain (Tiger 100V galvanized load chain)	1	●
⑳	ET-20	Wheel-Side Plate Assembly	1	
㉑	ET-21	Disc Hub (ETCB-Type)	1	
㉓	ET-23	Brake Discs / Ratchet Gear (Set)	1	

	Part No	Part Name	QTY	Interchangeable with PROCB
㉔	ET-24	Pawl Spring	2	●
㉕	ET-25	Pawl	2	●
㉖	ET-26	Snap Ring for Pawl Pin	2	●
㉗	ET-27	Brake Cover	1	
㉛	ET-31	Check/Castle Nut	1	●
㉜	ET-32	Cotter/Split Pin For Check Nut	1	●
㉞		3t Load Chain Hook Pin	1	●
	ET-34	6t Load Chain Hook Pin	1	●
		10t Load Chain Hook Pin	1	●
㉟	ET-35	Top Hook Pin	1	●
㊱	ET-36	Flat Nut	4	
㊲	ET-37	Brake Cover Support tube	3	
㊳	ET-38	Overload Limiter Assembly	1	
㊴	ET-39	Disc Washer	2	
㊵	ET-40	Transmission parts cover	1	
㊶	ET-41	Gear Box - Support tube	4	
㊷	ET-42	Gear Box support plate	1	
㊸	ET-43	Hex socket screw	1	
㊹	ET-44	Spring Washer	5	
㊺	ET-45	Coupling Fixing Washer	1	
㊻	ET-46	Coupling Assembly	1	
㊼	ET-47	Gearbox	1	
㊽	ET-48	Hex socket screw(110L)	4	
㊾	ET-49	Input Shaft Collar	1	